



**USER MANUAL – EN**

**IN 13913 Massage Chair inSPORTline Gambino**



**CONTENTS**

INTRODUCTION ..... 3

SAFETY INSTRUCTIONS..... 3

    Important safety warning..... 3

    Environment for usage..... 3

    People who are not suitable to use this product..... 3

    Safety ..... 4

    Maintenance..... 4

    Solution of ordinary malfunctions..... 5

NAME AND FUNCTION OF COMPONENTS ..... 5

    Components..... 5

    Function ..... 6

METHOD OF USAGE ..... 6

    Buttons ..... 6

    Switch on the machine..... 6

    Start to massage..... 7

    Music play by Bluetooth operation instructions..... 7

    Turn off power/Stop massage..... 7

    Floor protection ..... 8

    Method of movement ..... 8

    Usage of the seat cushion ..... 8

PRODUCT SPECIFICATION ..... 9

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 9

## **INTRODUCTION**

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operating it. Please pay more attention to some important safety warning and keep this manual for future use. Note: Our company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual colour of this product.

## **SAFETY INSTRUCTIONS**

### **Important safety warning**

- Place the product on flat and solid surface and keep at least 0.6 m free space around the product.
- Don't allow children to touch moveable parts of this product.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or damage to the product.
- Please operate this product according to this manual instruction.
- Don't use accessories which are not recommended.
- Don't use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- Maximum 20 minutes of usage each time are recommended.
- Please don't use it if the leather is broken or damaged.
- Please don't use it if the cover or leather is damaged.
- Please don't use it if the radiator hole is covered or blocked.
- Please don't drop anything onto this product.
- Please don't fall asleep while using this product.
- Please don't use it if you are drunk or feeling unwell.
- Please don't use it within one hour after having a meal.
- Please don't make the massage function too strongly to avoid injury.
- Maximum load: 110 kg

### **Environment for usage**

- Please don't use it under high temperature and moist environment such as bathroom.
- Please don't use it immediately while the environmental temperature changes sharply. Please don't use it under dust-heavy or caustic environment.
- Please don't use it where there is not enough space or not good ventilation.

### **People who are not suitable to use this product**

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.

- Pregnant women or women on their period are not suitable to use this product.
- People who got injured or have a skin disease are not suitable to use this product.
- Children under 14-years old or people mentally unbalanced without being supervised are not allowed to use this machine.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.

## **Safety**

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hands to pull the plug.
- Don't make water go inside this product to avoid electric shock or damage to this product.
- Don't damage the wires or change the circuit of this product.
- Don't use wet cloth to clean the electric parts such as the switch and the plug.
- Stand away from this product during a power outage to avoid injury, in case the power comes back suddenly.
- Stop using this product if it starts working abnormally, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult your GP.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## **Maintenance**

 
- This product should be maintained by certain appointed agents; users are prohibited to disassemble or maintain it by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket is loose.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid long-time direct sunshine.
- If the detachable cord/supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't touch this product with edged objects.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for too long.

## Solution of ordinary malfunctions

- It is natural for the motor to make a noise while the chair is turned on.
- If the controller can't work normally, please check if the plug and the socket are connected well and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button. If this product works continuously for long, the temperature protector will make the product automatically power-off. It should be used again after half an hour's rest.

## NAME AND FUNCTION OF COMPONENTS

### Components

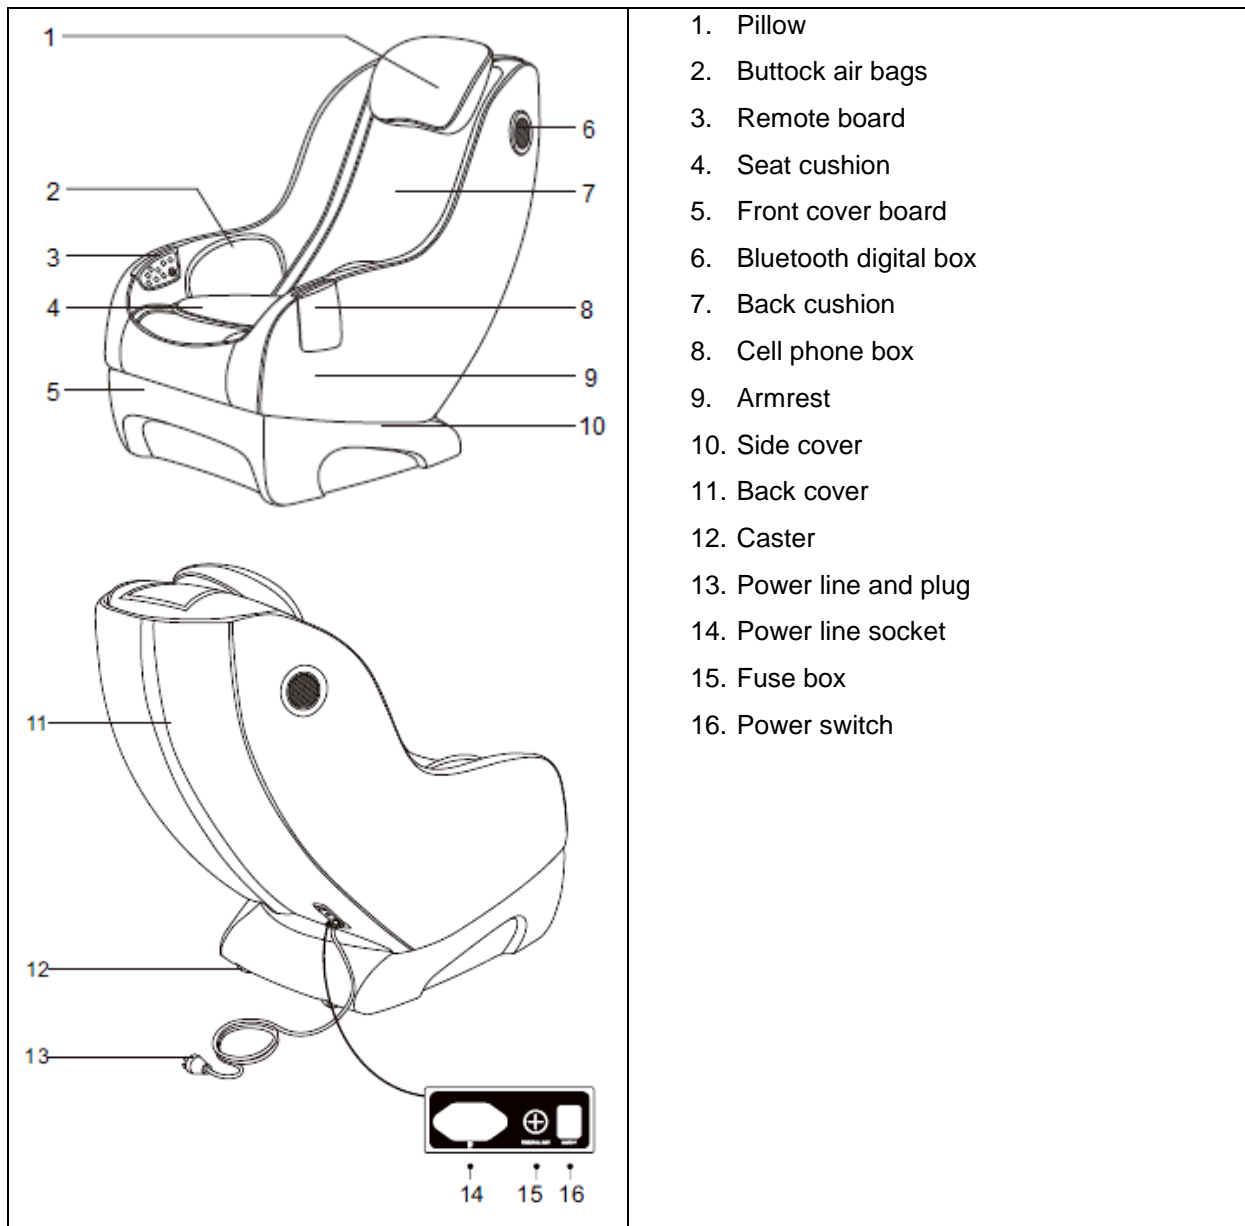


## Function

1. Massage mechanism is four-wheel-driven, muted design and can move up and down.
2. Designed with 3 kinds of simulation massage models: kneading, tapping, sync with kneading and tapping,
3. Set with automatic massage function: whole body, upper body and lower body.
4. Choose your favourite massage point manually, with the choice of two-directional kneading, unidirectional kneading and two speeds of knocking.
5. With air pressure massage function: air massage on your buttocks, with 3 optional levels.
6. Connect with your smart device through Bluetooth and play music.
7. Music system with two 3D digital sound boxes on your shoulders.
8. SL style super long curved track to fit your body and massage from your shoulder to your legs.
9. Massage hands restore automatically when the machine turns off.
10. With extra cushion on your seat, you can relieve the hardness on your buttock. The users can decide whether to use it or not. It is possible to disassemble it.


## METHOD OF USAGE
 
### Buttons

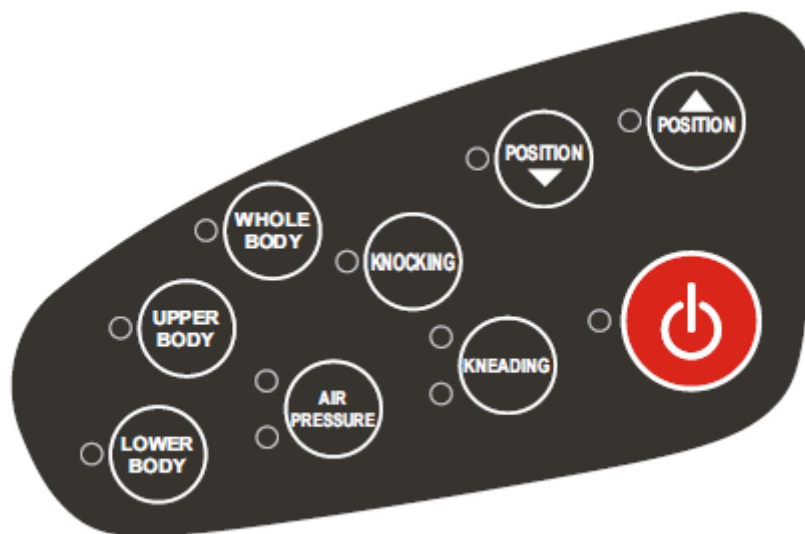

Note: See details on actual product buttons light.

### Switch on the machine

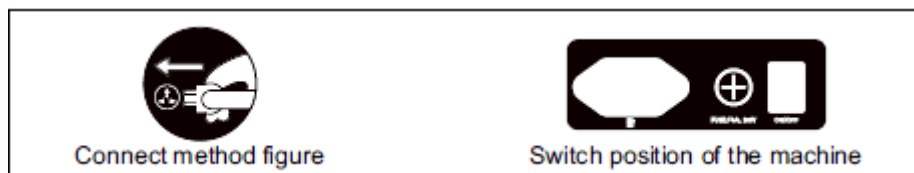 



## Start to massage





Press the red button to start massage.

Enter the whole body massage model to massage automatically, you can choose other models also.


### A. Auto massage

| Description  | Button  | Massage Features        | Display               |
|--------------|---|-------------------------|-----------------------|
| Auto Massage |  | Massage your whole body | See the buttons light |
|              |  | Massage your upper body | See the buttons light |
|              |  | Massage your lower body | See the buttons light |

### B. Upper body manual massage, lower body manual massage

| Description                 | Button  | Description                                       | Display               |
|-----------------------------|---|---|-----------------------|
| Manuals                     |    | Two-directional kneading, unidirectional kneading | See the Buttons light |
|                             |    | Strong and weak speed                             | See the Buttons light |
| Massage Position Adjustment |   | Massage hand move up                              | See the Buttons light |
|                             |  | Massage hand move down                            | See the Buttons light |

### C. Lower body air massage by manual

| Description  | Button  | Description  | Display               |
|--------------|---|--|-----------------------|
| Air Pressure |  | Air massage on your buttocks, strong, medium, weak to adjustable | See the Buttons light |

## Music play by Bluetooth operation instructions


### Operational method

- Enter the smart device menu, go to Settings and turn on Bluetooth. The device will automatically search for new devices to connect to.
- The smart device will find the relevant Bluetooth model as IMCM-0066 and ask to connect. Choose YES or CONFIRM.
- Enter the password 0000 or 1234, then CONFIRM to finish the match.
- Open your music player on the smart device and choose the music to play.
- Attention: Every Bluetooth model is subject to the actual searched model, as IMCM-0066 or IMCM-0061 or IMCM 0088, etc. Every Bluetooth is unique.

## Turn off power/Stop massage


If you press the red button during the massage, or the time is out, all the massage functions will stop and the massage hands return to their initial position. After this is complete, turn off the power.

 **Figure (Turn off the power):**

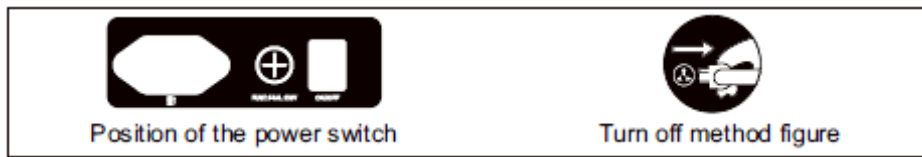

## **Floor protection**

 
Letting the heavy massage chair stand on a wooden floor for a long time may damage the floor, so please place a carpet or other protection under the chair to avoid this kind of damage.

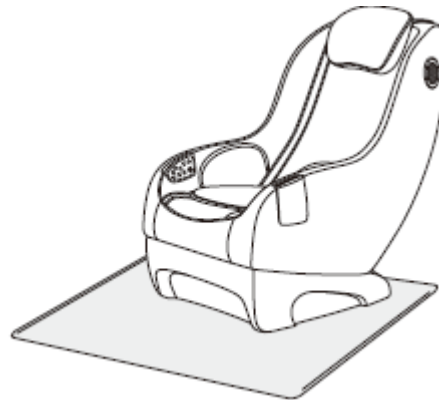

**CAUTION:** Do not move the chair with its casters on bumpy ground or in a narrow space. Two people are required to lift the chair, and main lift points are on the front cover board and back cover.

## **Method of movement**

 Make sure that all wires are far above the ground, tilt the backrest backward to a certain degree, with the gravity centre resting on the casters (no bigger than 30 degrees), push the chair forward or backward with your hands and finally slide the chair to the normal position in a slow and gentle manner.

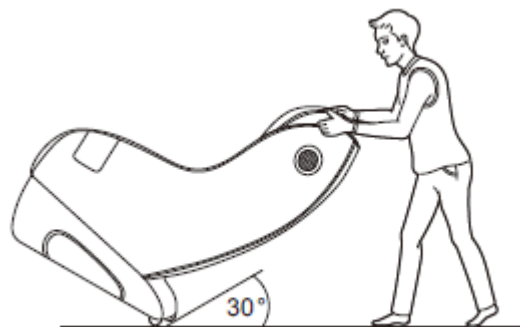


**CAUTION:** Make sure, that the chair is turned off and taken off the power line before moving.

## **Usage of the seat cushion**

 With extra cushion on your seat, can relieve the hardness on your buttock, the users can decide to use it or not. Or you can disassemble it.



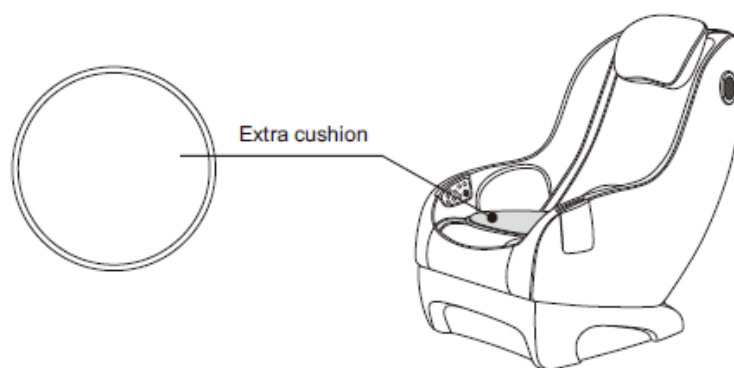

## PRODUCT SPECIFICATION

- **Model:** Gambino (A150)
- **Name:** UU Chair
- **Rated voltage:** 110 – 120 V~ 60 Hz, 220 – 240 V~ 50 Hz/60 Hz
- **Rated power input:** 45 W
- **Noise:** ≤ 55 dB
- **Rated time:** 20 min
- **Safety class:** I

**Material introduction:** PVC, PA, steel parts, electric and electron parts.

## TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

### General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 40/1964 Coll. Civil Code, Act No. 513/1991 Coll., Commercial Code, and Act No. 634/1992 Coll., Consumer Protection Act, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions to the extent specified in the Commercial Code.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

### Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

**The Warranty does not cover defects resulting from (if applicable):**

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

**Warranty Claim Procedure**

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



**SEVEN SPORT s.r.o.**

Registered Office:

Borivojova 35/878, 130 00 Praha 3, Czech Republic

Headquarters:

Delnicka 957, 749 01 Vitkov, Czech Republic

Warranty & Service Centre:

Cermenska 486, 749 01 Vitkov, Czech Republic

CRN: 26847264  
VAT ID: CZ26847264  
Phone: +420 556 300 970  
E-mail: eshop@insportline.cz  
reklamace@insportline.cz  
servis@insportline.cz  
Web: www.insportline.cz

---

**SK**

**INSPORTLINÉ s.r.o.**

Headquarters, Warranty & Service centre: Elektrická 6471, 911 01 Trenčín, Slovakia

CRN: 36311723

VAT ID: SK2020177082

Phone: +421(0)326 526 701  
E-mail: objednavky@insportline.sk

reklamacie@insportline.sk

servis@insportline.sk

Web: www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: